



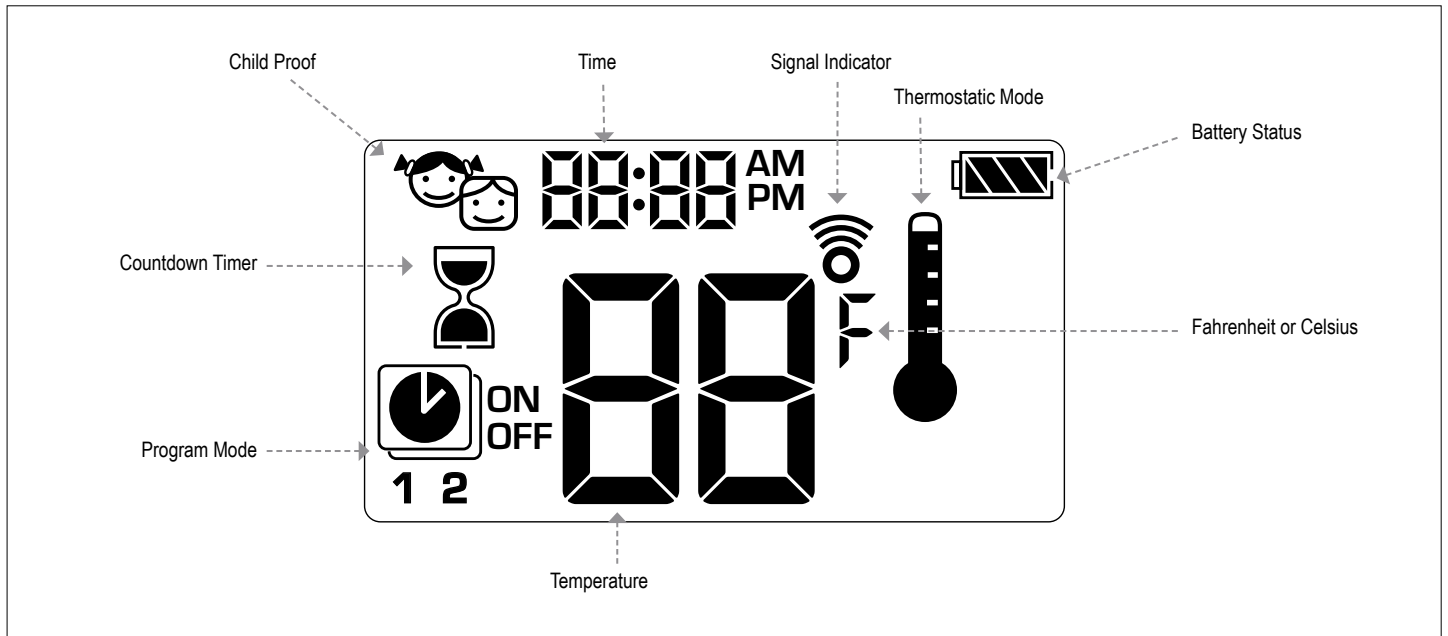

SYMAX REMOTE CONTROL INSTRUCTIONS

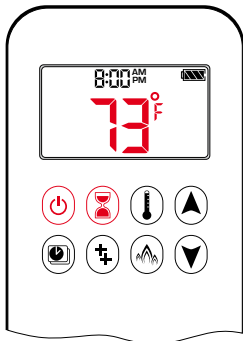


SETTING FAHRENHEIT or CELSIUS


 



To change between °C and °F, press  and  buttons simultaneously.

NOTE: Choosing °F results in a 12 hour clock. Choosing °C results in a 24 hour clock.


CHILD PROOF

 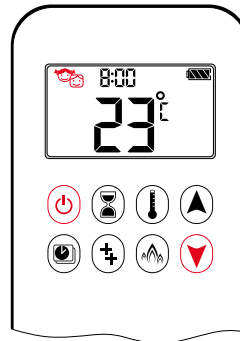

 

 
 
 
 






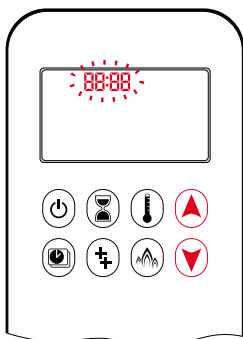

ON:
To activate press  and  buttons simultaneously.  displayed and the handset is rendered inoperable, except for the off function.

OFF:
To deactivate press  and  buttons simultaneously.  disappears.

SETTING the TIME




1. Press  and  buttons simultaneously. **Day** flashes.
2. Press  or  button to select a number to correspond with the day of the week (e.g. 1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday).
3. Press  and  buttons simultaneously. **Hour** flashes.
4. To select hour press  or  button.
5. Press  and  buttons simultaneously. **Minutes** flash.
6. To select minutes press  or  button.
7. To confirm press  and  buttons simultaneously or wait.

MANUAL MODE (HANDSET)

NOTICE


BEFORE OPERATING

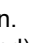1. Make sure MANUAL knob on the GV60 valve is in the **ON**, full counterclockwise  position.
2. Place the ON/OFF switch (if equipped) in the I (ON) position.


TO TURN ON FIRE

⚠ WARNING


When pilot ignition is confirmed, motor turns automatically to maximum flame height.

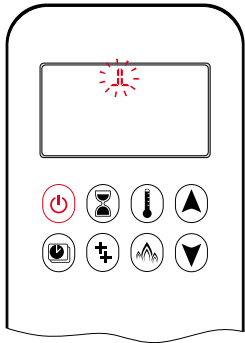


Handset One-Button Operation (Default Setting)



 - Press  button until two short beeps and a blinking series of lines confirms the start sequence has begun; release button.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition.

NOTICE

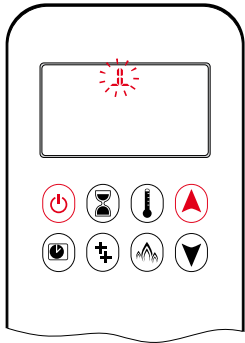
Change from one-button to two-button ignition operation by pressing and holding  button for 10 sec. immediately after installing batteries. **ON** is displayed and **1** is flashing. When change is complete **1** will change to **2**.



Handset Two-Button Operation

- Press  and  button simultaneously until two short beeps and a blinking series of lines confirms the start sequence has begun; release buttons.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition.

 NOTICE


Change from two-button to one-button ignition operation by pressing and holding  button for 10 sec. immediately after installing batteries. **ON** is displayed and **2** is flashing. When change is complete **2** will change to **1**.

⚠ WARNING


If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions "TURN OFF GAS TO APPLIANCE" (page 15).

STANDBY MODE (PILOT FLAME)


Handset

- Press and hold  button to set appliance to pilot flame.

TO TURN OFF FIRE

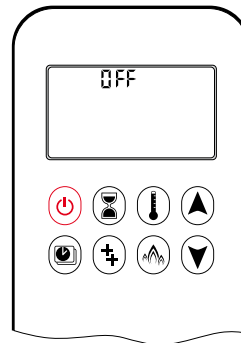


Handset



- Press  button to turn OFF.

NOTE: There is a 5 sec delay before the next ignition is possible.

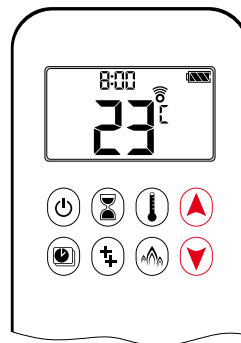FLAME HEIGHT ADJUSTMENT





Handset

- To increase flame height press and hold  button.
- To decrease flame height or to set appliance to pilot flame, press and hold  button.


DESIGNATED LOW FIRE and HIGH FIRE

NOTE: Backlight must be on for high fire and low fire double-click operation.

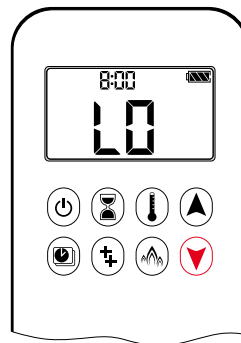

- To go to low fire, double-click  button. **LO** is displayed.

NOTE: Flame goes to high fire first before going to low fire.

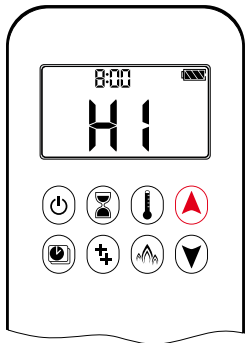


- To go to high fire, double-click ▲ button. HI is displayed.

⚠ WARNING

If the appliance will not operate, follow the instructions "TURN OFF GAS TO APPLIANCE" (page 15).

COUNTDOWN TIMER

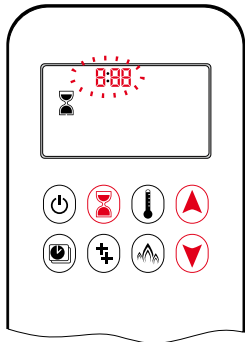

ON/SETTING:


- Press and hold ⏸ button until ⏸ displayed, and **hour** flashes.
- To select hour press ▲ or ▼ button.
- To confirm press ⏸ button. **Minutes** flash.
- To select minutes press ▲ or ▼ button.
- To confirm press ⏸ button or wait.

OFF:

Press ⏸ button, ⏸ and countdown time disappear.


NOTE: At end of countdown time period, the fire turns off. The Countdown Timer only works in Manual, Thermostatic, and Eco Modes. Maximum countdown time is 9 hours and 50 minutes.

MODES of OPERATION

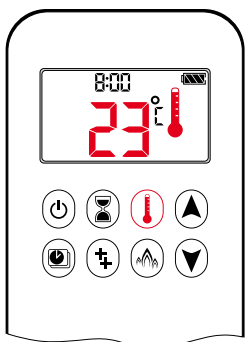

Thermostatic Mode


The room temperature is measured and compared to the set temperature. The flame height is then automatically adjusted to achieve the set temperature.

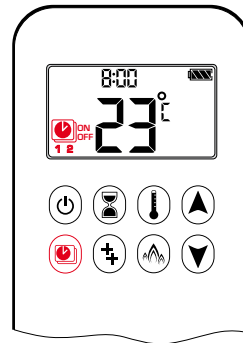

Program Mode

PROGRAMS 1 and 2, each can be programmed to go on and off at specific times at a set temperature.

THERMOSTATIC MODE

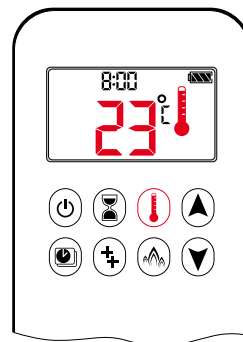


ON:

Press ↓ button. ↓ displayed, preset temperature displayed briefly, and then room temperature displayed.

OFF:


- Press ↓ button.
- Press ▲ or ▼ button to enter Manual Mode.
- Press ⌚ button to enter Program Mode.

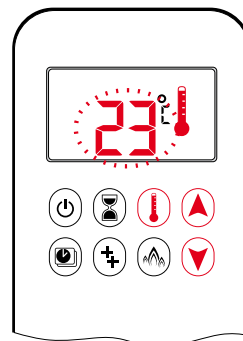

SETTING:


- Press ↓ button and hold until ↓ displayed, temperature flashes.
- To adjust set temperature press ▲ or ▼ button.
- To confirm press ↓ button or wait.

PROGRAM MODE

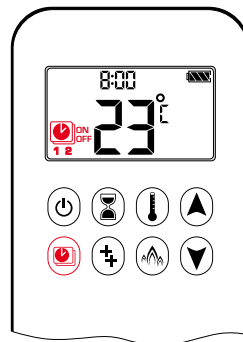

ON:

Press ⌚ button. ⌚, 1 or 2, ON or OFF displayed.

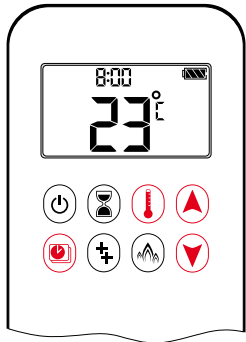


OFF:

1. Press or or button to enter Manual Mode.
2. Press button to enter Thermostatic Mode.

NOTE: The set temperature for Thermostatic Mode is the temperature for the on time in Program Mode. Changing the Thermostatic Mode set temperature also changes the on time temperature in Program Mode.

Default settings:


ON TIME (Thermostatic) TEMPERATURE: 21 °C (70 °F)
OFF TIME TEMPERATURE: "--" (pilot flame only)

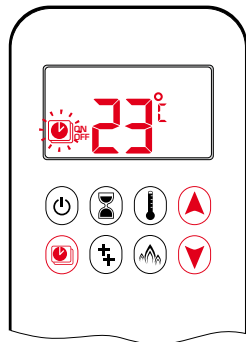

TEMPERATURE SETTING:

1. Press button and hold until flashes. **ON** and set temperature (setting in Thermostatic Mode) displayed.
2. To continue press button or wait. , **OFF** displayed, temperature flashes.
3. Select off temperature by pressing the or button.
4. To confirm press button.


NOTE: The on (Thermostatic) and off set temperatures are the same for each day.

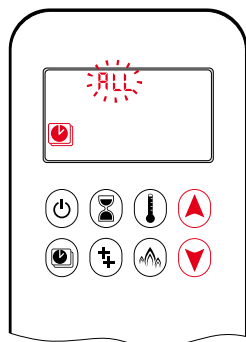

DAY SETTING:


5. **ALL** flashes. Press or button to choose between **ALL**, **SAT/SUN**, 1, 2, 3, 4, 5, 6, 7.
6. To confirm press button.

ALL selected

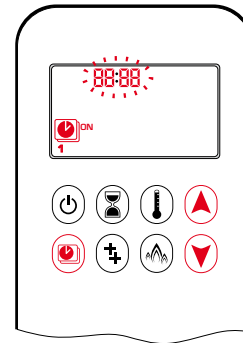

ON TIME SETTING (PROGRAM 1):

7. , **1**, **ON** displayed, **ALL** is displayed shortly, and **hour** flashes.
8. To select hour press or button.
9. To confirm press button. , **1**, **ON** displayed, **ALL** displayed shortly, and **minutes** flash.
10. To select minutes press or button.
11. To confirm press button.

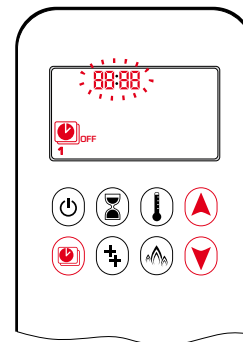

OFF TIME SETTING (PROGRAM 1):

12. , **1**, **OFF** displayed, **ALL** is displayed shortly, and **hour** flashes.
13. To select hour, press or button.
14. To confirm press button. , **1**, **OFF** displayed, **ALL** displayed shortly, and **minutes** flash.
15. To select minutes press or button.
16. To confirm press button.

NOTE: Either continue to PROGRAM 2 and set on and off times or stop programming at this point, and PROGRAM 2 remains deactivated.

NOTE: PROGRAM 1 and 2 use the same on (Thermostatic) and off temperatures for **ALL**, **SAT/SUN** and Daily Timer (1, 2, 3, 4, 5, 6, 7). Once a new on (Thermostatic) and/or off temperature has been set, that temperature becomes the new default setting.

NOTE: If **ALL**, **SAT/SUN** or Daily Timer are programmed for PROGRAM 1 and PROGRAM 2 on and off times, these become the new default times. The batteries must be removed to clear the PROGRAM 1 and PROGRAM 2 on and off times and temperatures.

SAT/SUN or Daily Timer (1, 2, 3, 4, 5, 6, 7) selected

- Set on time and off time using same procedure as "**ALL selected**" (above).
- **SAT/SUN**: Set on time and off time for both Saturday and Sunday.
- **Daily Timer**: Unique on and off times may be set for a single day of the week, for multiple days of the week, or for every day of the week.
- Wait to finish setting.

NOTE: The location of the remote control handset is important to assure proper temperature regulation. To obtain a constant temperature. Flare recommends that the handset should be between 3 and 15 feet away from the appliance but not directly above it. We also advise that the handset should be located away from any other heat source and not in direct sunlight as this may affect the temperature sensor located in the remote handset.